

Thermostat AE-Y379 A/F/AF Combi

Instructions

SPECIFICATIONS

Set-point Range: 5°C to 35°C (Adaptable)
Display Accuracy: $\pm 1^{\circ}\text{C}$
Switch Current Rating: 16A
Sensing Element : NTC

Display: Screen LCD
Power Supply: 220VAC $\pm 15\%$ 50-60 Hz
Housing: Flame Retarding PC

TURNING ON/OFF THE THERMOSTAT

Press "⏻" to turn on the thermostat; Press "⏻" again to turn off the thermostat.

HEATING STATUS

There is a sun-like icon displaying on the LCD indicating the heating output is on. When the ambient temperature reaches the set point, the fan icon "🌀" will disappear, and in this case the heating output is off.

SETTING ROOM TEMPERATURE

When the thermostat is turned on, press the up/down arrow button to set the temperature.
Press the up arrow button to increase the temperature by 1 °C.
Press the down arrow button to decrease the temperature by 1 °C.
Temperature setting will be automatically confirmed after 5 seconds of non-activity.

SETTING FLOOR TEMPERATURE

When the thermostat is turned on, press the sun-like icon "☀️" for 5 seconds to set floor temperature.
The flashing default temperature is 35°C.
Press the up arrow button to increase the temperature by 1 °C.
Press the down arrow button to decrease the temperature by 1 °C.
Temperature setting will be automatically confirmed after 5 seconds of non-activity.

SETTING KEY-LOCK

When the thermostat is turned on, press "🔒" to lock the thermostat.
Press "🔒" again, the thermostat will unlock. The thermostat can be operated normally.

INSTALLATION

Detach the front panel from the back panel by using a flat-head screw driver.
Put the back panel into the wall box after wiring is done. Screw the back panel with the wall box.
Fasten the front panel with the back panel.

WIRING DIAGRAM

